

WARRANTY CARD

PWC-400



INSTRUCTIONS FOR USE

PWC-400



TURBOhandy ²in¹ by Cleansy

cleanSy by Zepter

© COPYRIGHT HOME ART & SALES SERVICES AG - ZEPTEK GROUP - PMD-HC42-09-EN - Art Work: BRID MARKETING - ITALY



TURBOhandy ²in¹ by Cleansy

cleanSy by Zepter

1	WARRANTY CARD (12 months): TURBO HANDY 2 in 1
2	DATE OF PURCHASE:
3	SERIAL NO.:
4	STAMP AND SIGNATURE OF RETAILER:
5	NAME AND ADDRESS OF PURCHASER:
6	FAULT/DEFECT:
7	This warranty card has to be sent to the retailer, together with the defective device and the receipt as proof of purchase.



INDEX

1.	OVERVIEW	page 03
2.	IMPORTANT SAFETY NOTICE	page 04
3.	GETTING STARTED	page 05
4.	CHARGING	page 06
5.	FUNCTIONS	page 07
6.	MAINTENANCE	page 08
7.	TECHNICAL SPECIFICATION	page 10
8.	DISPOSAL	page 10
9.	WARRANTY STATEMENT	page 11
10.	TROUBLESHOOTING	page 12



1. OVERVIEW

- 1A** TURBO POWER UNIT switch
- 1B** HANDY UNIT switch
- 2** TURBO POWER UNIT
 - 2.1** Upper handle
 - 2.2** Handle foldable axis
 - 2.3** Handle folding button
 - 2.4** Release button
 - 2.5** Main body
 - 2.6** Electrical TURBO BRUSH
- 3** HANDY UNIT
- 4** FILTER UNIT
 - 4.1: Washable filter
 - 4.2: Filter baffle
- 5** TURBO BRUSH assembly with Rolling Brush
- 6** CHARGING BASE
 - 6.1: Charger
- 7** Filter assembly
- 8** ZEPTER free-standing mechanism

2. IMPORTANT SAFETY NOTICE

- The device is only authorised for private, domestic use!
- Do not leave the device unsupervised when the charging plug is connected.
- The device is not a toy, therefore please be particularly careful when children are around.
- Check the device and connections regularly for visible damage. The device must not be used if the housing is damaged or other damage is present.
- Never attempt to open the device or the mains adapter yourself or to replace the connecting cable. Always have repairs to the device carried out by a Zepter service centre. There is considerable danger to the user if repairs are faulty.
- Never pull on the cable to disconnect the mains adapter from the mains, always use the plug.
- Do not trap the mains adapter cable and when using the adapter, pay attention to where the cable is to prevent any danger of tripping over it. Keep the cable away from heated surfaces (e.g. cooker surfaces).
- Do not touch the mains adapter and cable with wet hands.
- Do not use the unit outside.
- Do not use the device to pick up inflammable fluids (e.g. Fuel or solvent) or burning objects (e.g. ash, lit cigarettes).
- Never vacuum up sharp objects such as shards of glass etc.
- Do not point the vacuum cleaner at persons or animals when in operation.
- Only use the mains adapter on dry surfaces in buildings.
- Only use the device with the accessories supplied.
- Please keep these instructions in a safe place.
- If passing on the device to someone else, please give them these operating instructions as well.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid danger.
- Use only with the provided adaptor.

3. GETTING STARTED

Unpacking and assembly

Check that all the parts are in the box. Parts breakdown: see chapter 1. OVERVIEW.


1 Extend the handle by unfolding it.

You can store it easily and save space by folding the handle.

Assemble the charging unit firmly.



2 Fit the Electrical Turbo Brush by carefully inserting it into the vacuum compartment.

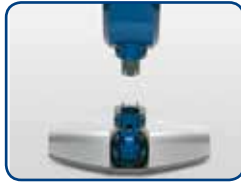

3 Position the charging station close to a mains socket (well away from heat sources or wet places). Insert the adaptor into the mains socket and connect the charging station.

Zepter free-standing mechanism

The Zepter free-standing mechanism is one of those intelligent little features that can be found on all Zepter appliances. The Zepter free-standing mechanism keeps the **TURBOhandy 2in1** in an upright position even without its charging unit. This feature lets you work hands-free when you need to rearrange furniture or anything else while cleaning.



4. CHARGING



Rest the device on the charging unit, (note: always make sure that the device is turned off). **The indicator light will keep on flashing during the charging process. Once the charging is finished, the light will stay on.** It takes 14-16 hours to fully charge the batteries before the first use. When the device is totally discharged, approximately 12-14 hours' charging is required for the battery to regain full capacity. In order to ensure that it is always ready for use, the device should be left on charger when not in use. The adaptor may become warm during charging, this is normal.

The Charger PWC-400-054 and Battery (12V 1800mAh) PWC-400-043 are available individually should they need to be replaced. Contact your local Zepter Service Centre.



5. FUNCTIONS

Cleaning your floor and carpet has never been so handy! **TURBOhandy 2in1** is your new incredibly practical **dual** appliance to **brush and vacuum** every corner of your home. Cordless and rechargeable, **this handy device splits in two**: the **Turbo power unit**, a bigger unit for floor and carpets and the **Handy unit** for crumbs and dust.

5.1 Vacuuming floors and carpets with the TURBO POWER UNIT

Despite its light appearance the **TURBOhandy 2in1** has got great power through its **electrical Turbo Brush**. Now dust and dirt have no escape.

Its slim form and light weight combined with the strong action of its powerful **Turbo Brush** make **TURBOhandy 2in1** your indispensable dirt and dust killer.

Most of all, **TURBOhandy 2in1** will follow you everywhere with no sign of tiredness or lapse in performance. Cordless and quickly recharged after use.

The powerful **Turbo Brush** is provided with a suction unit and a rotating carpet sweeper brush, operated by the same suction air. **Turbo Brush** is a carpet sweeper that is able to completely vacuum dust as well as pet hairs and other fibres from all kinds of floors.

You should regularly check that the nozzle cushions and the brush roller are clean in order to avoid scratching delicate floors.



Start the device by pushing the on/off switch (1A) away from you.



5.2 Vacuuming tables, furniture, car seats and more with the HANDY UNIT

Breadcrumbs on tables, sticky hair on furniture, spoiled car seats and every awkward corner will be easily vacuumed thanks to the Handy unit: just press the release button (2.4) and the Handy unit is ready to use. With its crevice nozzle fitted you can reach even the narrowest places.

Keep the release button pressed to take the Handy unit off.



6. MAINTENANCE

Emptying/cleaning

Careful cleaning of the dust container and filters.

- 1 Remove the whole dust container by pressing the release button and twisting the dust container off.



- 2 Pulling out the filter unit (4) and emptying the contents of the dust container into a suitable vessel or bag.
(The filter can be shaken clean or cleaned and rinsed using warm water. Make sure that the parts are dry before they are reassembled).



- 3 Reassemble the components.

Firstly assemble the filter baffle (4.2) onto the washable filter (4.1), then put the filter into the filter unit (4), refer to below pictures.



Secondly assemble the dust container by following the detaching procedure in reverse.

The Filtration System Set PWC-400-102 is available individually should it need to be replaced. Contact your local Zepter Service Centre.

Cleaning the Rolling Brush

If the **Rolling Brush** (5) becomes blocked or jammed for any reason, the vacuum power will be reduced. The **Rolling Brush** may then need to be cleaned. First turn off the device, and then carefully use a pair of scissors or a sharp knife to remove any items such as threads that may have become entangled.

If the **Rolling Brush** needs to be lifted out – open the hatch cover by turning the locking screw anti-clockwise with a screwdriver or other tool. The hatch cover will come slightly free and can now be removed.



Lift out the roller brush and clean it. Replace the **Rolling Brush** and make sure that it fits into its guiding tracks, and make sure that it can spin freely. Replace the hatch cover and lock by turning clockwise as far as possible.



Cleaning of wheel axles

If a wheel is jammed by threads or dirt: remove the wheels by carefully loosening them with a screwdriver inserted into the cavity. Remove threads or any other objects that may have become jammed in the wheels' axles. Reassemble the wheels by pressing them tightly together.

7. TECHNICAL SPECIFICATION

ADAPTOR INPUT:	230-240V~ 50Hz
ADAPTOR OUTPUT:	15.6V DC 400mA
NET WEIGHT:	3.4 kg
SIZES:	113.50 X 16.00 X 27.00 (CM)
PRODUCT CODE:	PWC - 400

8. DISPOSAL

In accordance with art. 13 of Legislative Decree no. 151 dated 25 July 2005, the implementation of European Directives 2002/95/EC, 2002/96/EC and 2003/108/EC on the reduced use of hazardous substances in electrical and electronic equipment, and their disposal, the barred bin symbol means that at the end of its useful life the product must be disposed of separately from ordinary waste.

At the end of its useful life, therefore, the user must dispose of the appliance at the specific differentiated waste collection centres for electronic and electro-technical waste, or alternatively give it to the retailer to dispose of appropriately upon purchasing a new equivalent appliance, under the one-for-one rule.



9. WARRANTY STATEMENT

This appliance can only be assigned to the functions it has been designed for, i.e. house cleaning and air enhancement. **Zepter International** cannot be held responsible for any damage deriving from improper, incorrect or unreasonable use. All our appliances have undergone strict inspection tests and are guaranteed against manufacturing defects. The guarantee starts from the date of purchase. The date of purchase is the date shown on the invoice issued by the dealer upon the delivery of the appliance. **Zepter Service Centre** undertakes to repair or replace cost-free within the guarantee period those parts that prove to have manufacturing defects. Those defects that are not clearly attributable to either the material or the manufacturing will be examined at one of our Technical Service Centres or at our headquarters and charged according to the outcome.

The Warranty is only valid if:

1. The machine shows material or product defects.
2. No signs of breaking by the customer or the presence of no original pieces fit by other people had been found.
3. Original accessories had been used.
4. The machine has not been overloaded or crashed.

The Warranty does not include:

1. The parts which can normally wear out.
2. The damages caused by transport, inadequate use, negligence, incorrect installation and use, not in conformity with the warning listed in the machine catalogue.

This guarantee does not affect the consumer's statutory rights under applicable national legislation in force, nor the consumer's rights against the retailer arising from the sales/purchase agreement.

In the absence of applicable national legislation, this guarantee will be consumer's sole and exclusive legal remedy, and Zepter shall not be liable for any incidental or consequential damages for breach of any express or implied guarantee of this product. The liability of Zepter is limited to and shall not exceed the purchase price of the product actually paid by the consumer.

This guarantee covers no damage to the product resulting from abuse or misuse of the product, inappropriate packaging, accidents, maintenance and repairs done by unauthorised centres.

If, after the purchase of the product, its label with the serial number has been removed or is not recognisable, Zepter reserves the right to refuse the guarantee service.

10. TROUBLESHOOTING

ISSUES	POSSIBLE CAUSES	SOLUTIONS
Vacuum will not operate.	Batteries are discharged.	Charge vacuum on Charger Base.
	Dead battery (won't hold charge).	Replace battery (call your Zepter Service Centre for info).
	Contacts between Vacuum and Charging Base are dirty.	Clean contacts off with damp cloth. Be sure to dry contacts completely before use.
	No power coming through electrical outlet.	Check fuse or breaker box - replace fuse or reset breaker.
Electrical Turbo Brush will not operate.	The two metal pins on Electrical Turbo Brush are not in contact with Vacuum.	Firmly insert the Electrical Turbo Brush into the Air Intake Nozzle of Hand Vacuum - this will connect the Electrical Turbo Brush Roller to the unit's power supply.
	Electrical Turbo Brush is clogged.	Remove hair, threads, etc. from Electrical Turbo Brush (see chapter 6).
Vacuum will not pick up, or suction power is weak.	Dust Cup container is full.	Empty Dust Cup.
	Dust Cup Filter needs cleaning or replacement.	Remove Dust Cup Filter and check for blockage in air flow duct and remove debris. Replace Dust Cup Filter if necessary (call your Zepter Service Centre for info).
	Unit needs to be recharged.	Charge unit on Charger Base.
Dust escaping from Vacuum.	Dust Cup container is full.	Empty Dust Cup container.
	Dust Cup Filter not installed properly.	Review Dust Cup Filter installation instructions and re-insert Filter.
	Puncture/hole in Dust Cup Filter.	Replace Dust Cup Filter (call your Zepter Service Centre for info).